DF57 Insertion and removal operation method

Mating

1. Determine position, fitting the external form



Unmating

1. Engage lever



2. Insert the cable side



2. Pull up and release the simple lock



3. Push the contact portion side



3. The reinforced lock is also released and the un-mating is complete



